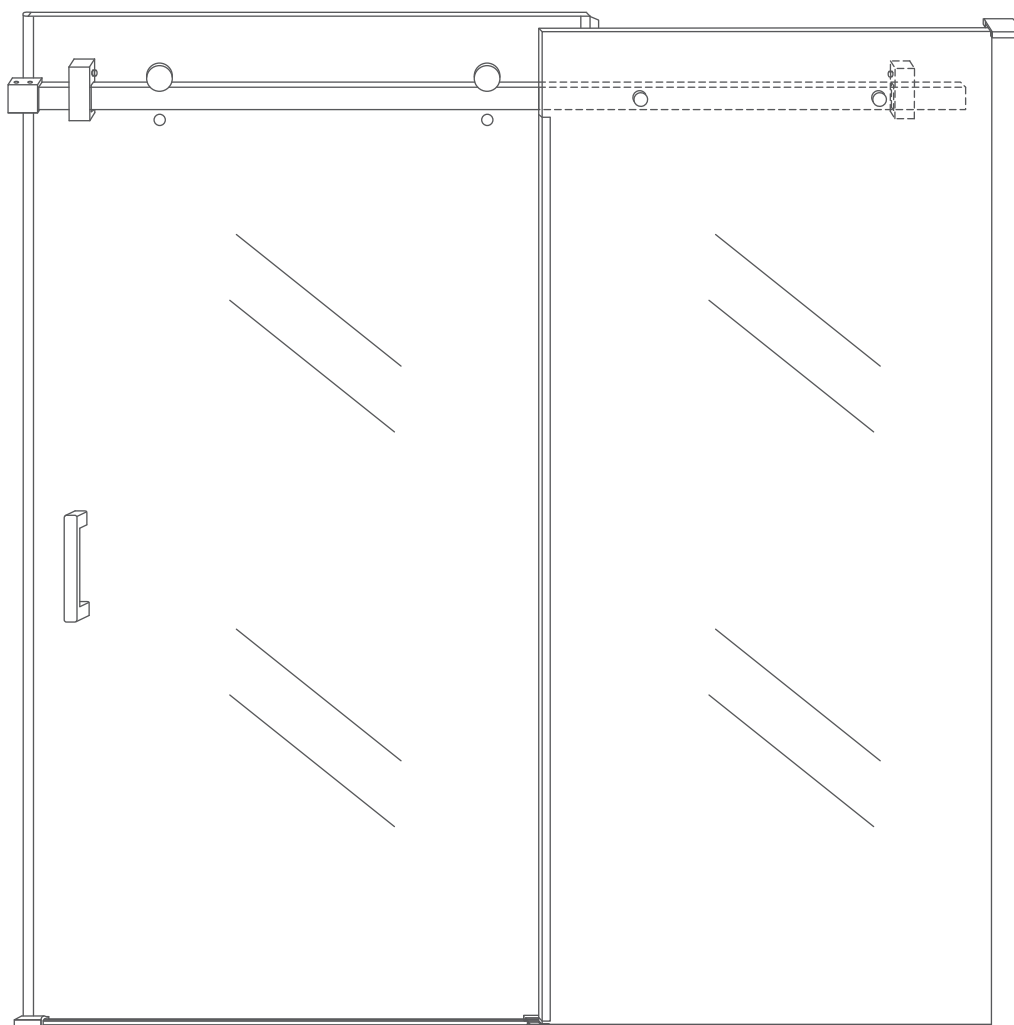



INSTALLATION MANUAL

























CR-045C12



CR-045C14

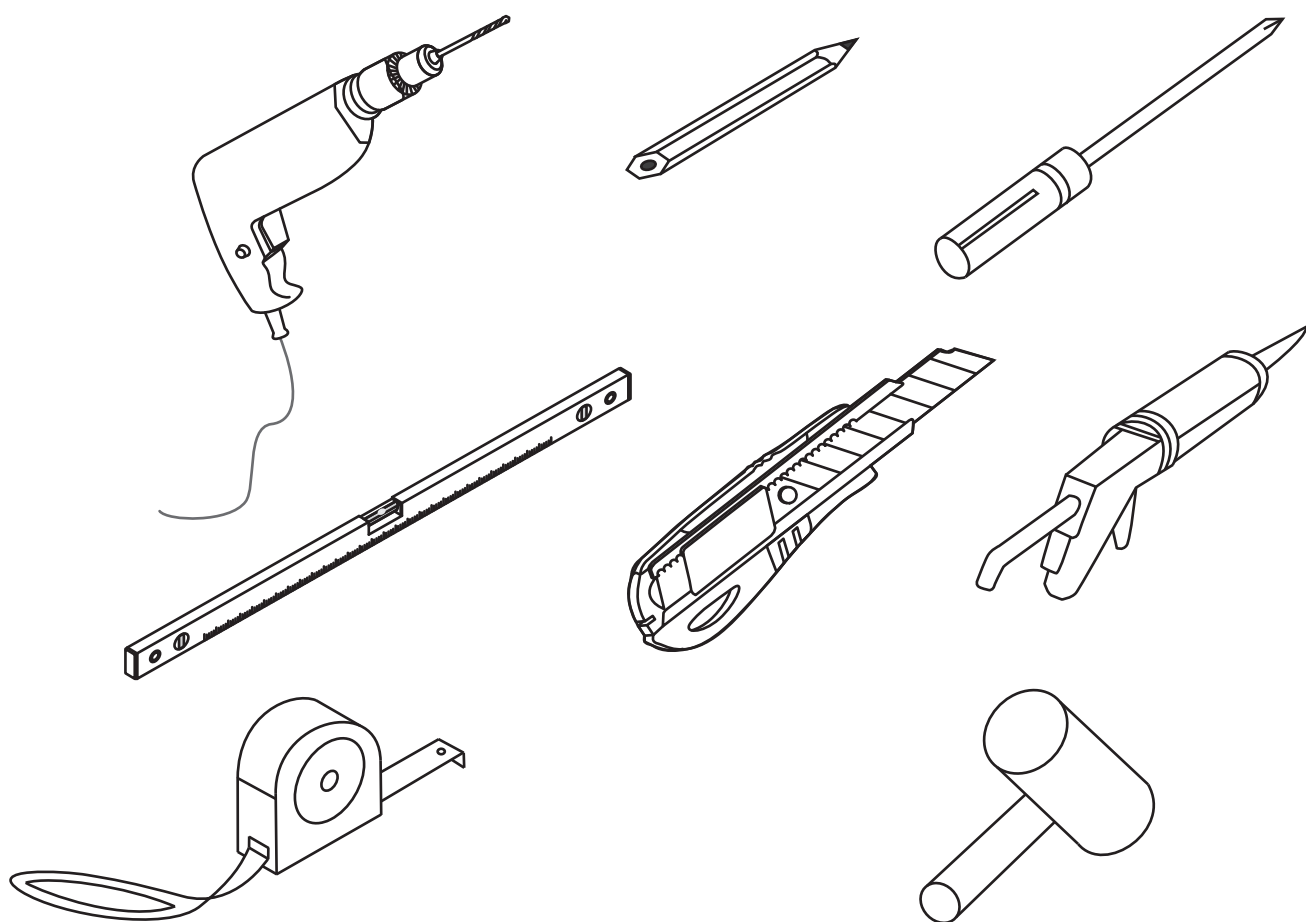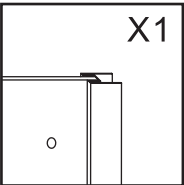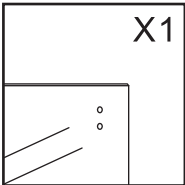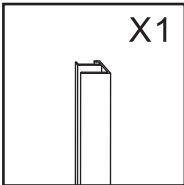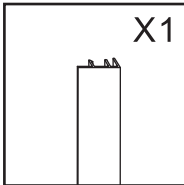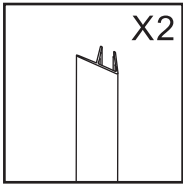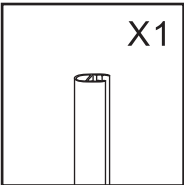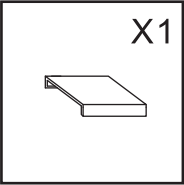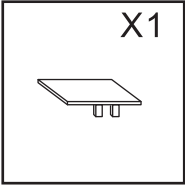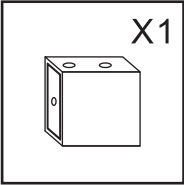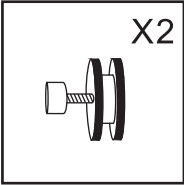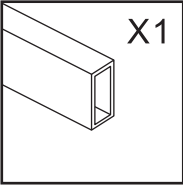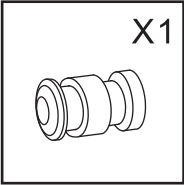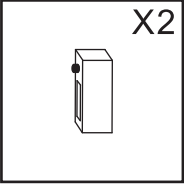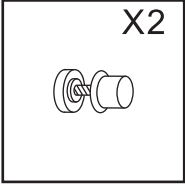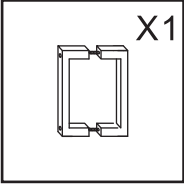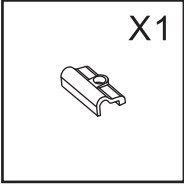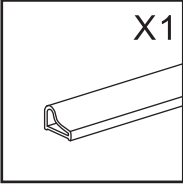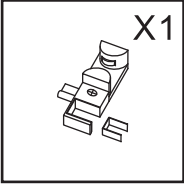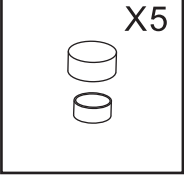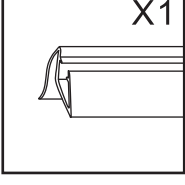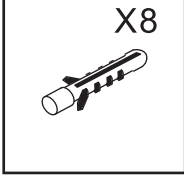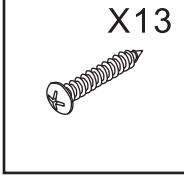RoHS  ISO9001:2008





 X1	 X1	 X1	 X1	 X2	 X1
GLASS	GLASS	KQ-03	BB-03	8B-2-15	8B-5
 X1	 X1	 X1	 X2	 X1	 X1
PJ-4566	PJ-4565	PJ-4152	LZ-5012	PJ-4028	PJ-4038
 X2	 X2	 X1	 X1	 X1	 X1
PJ-4133	PJ-4412	LS-1105	PJ-4578	LT-01	PJ-4131
 X5	 X1	 X8	 X13		
PJ-4577	8S-180	PJ-4606			

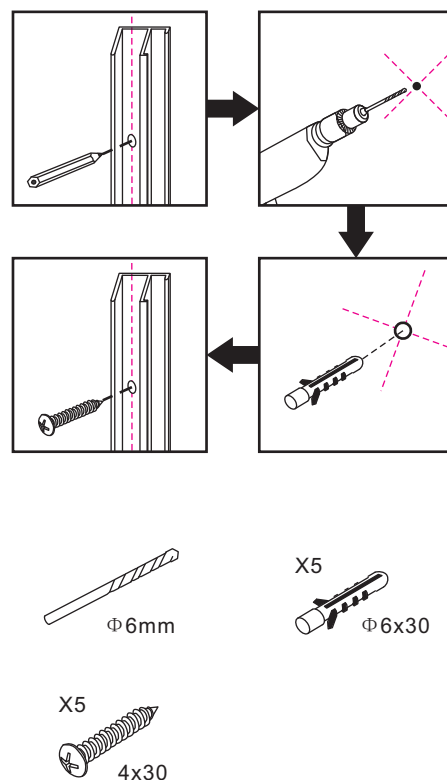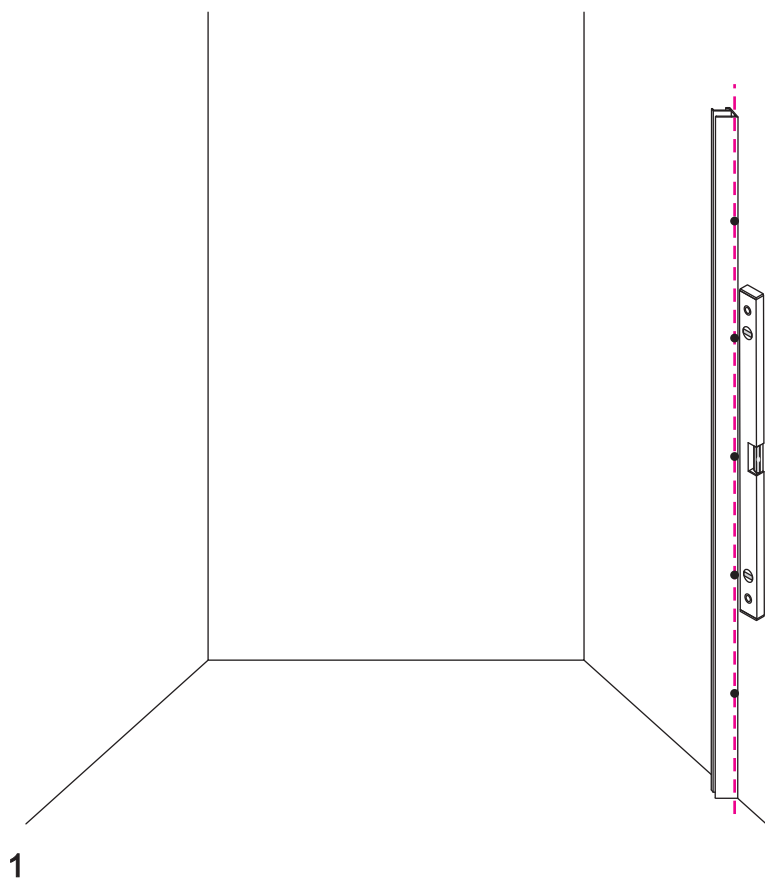
Install the wall aluminum profile



As the photo show mark the size then install the stainless steel fixed part .

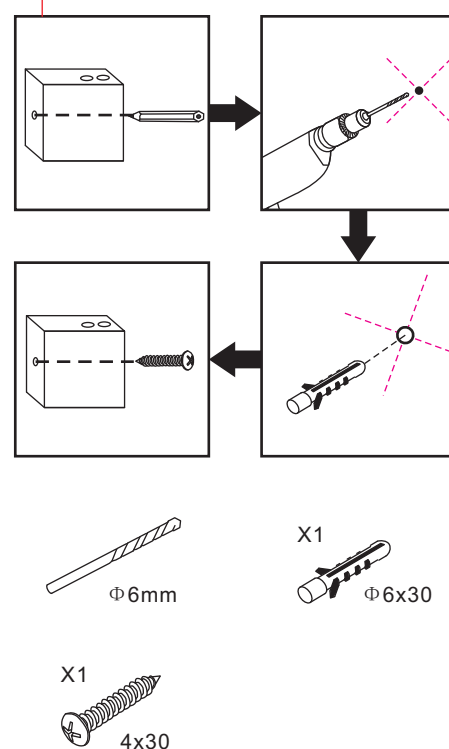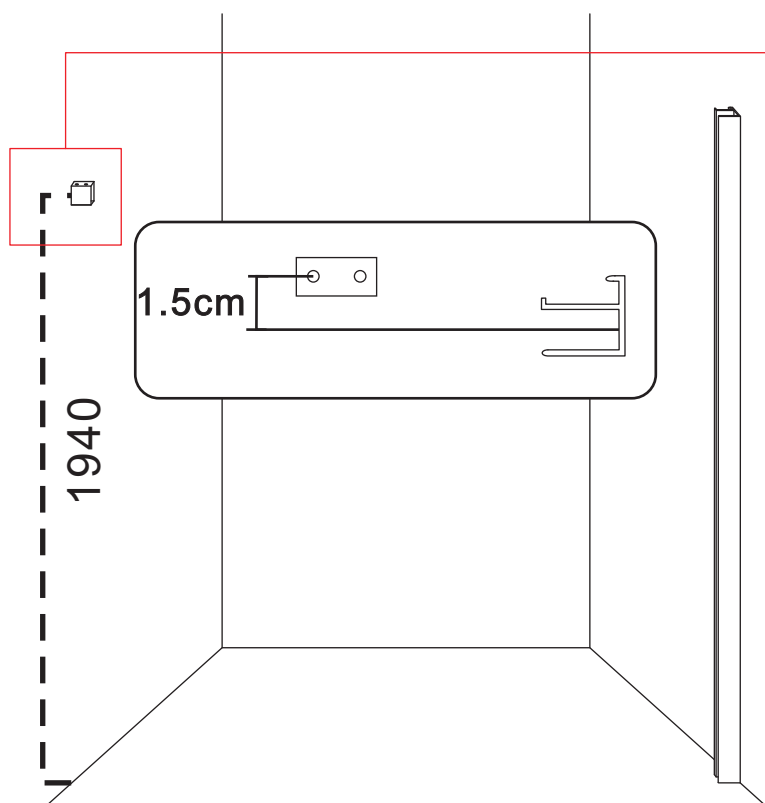

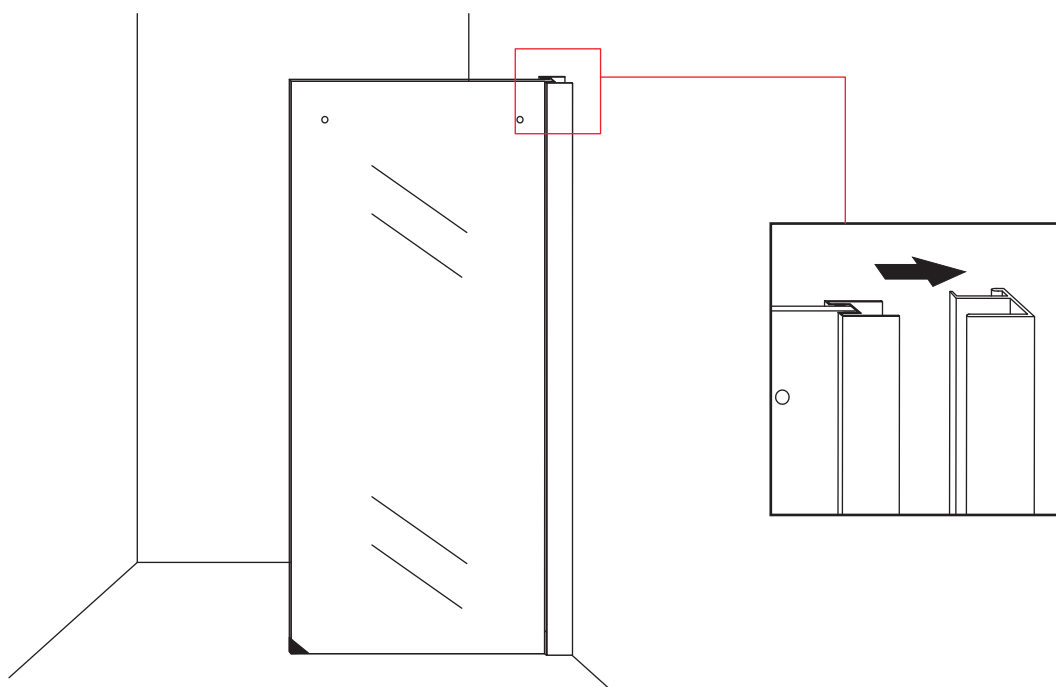Insert the glass profile to the wall aluminum profile .




Attention: Do not remove the Black corner protector until insert well the glass into the wall profiles and fit well to prevent glass broken and splitted.





3

As the drawing show install and fix the sliding track on the fixed glass .

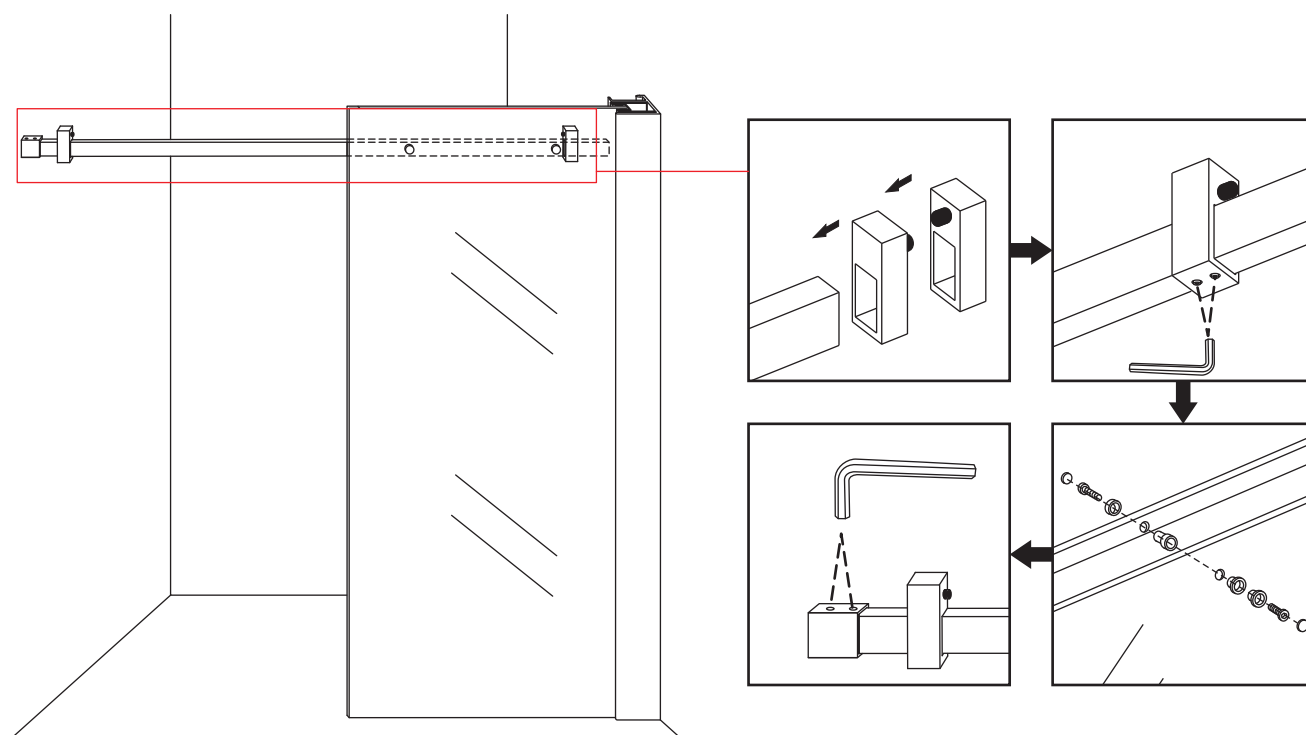



4

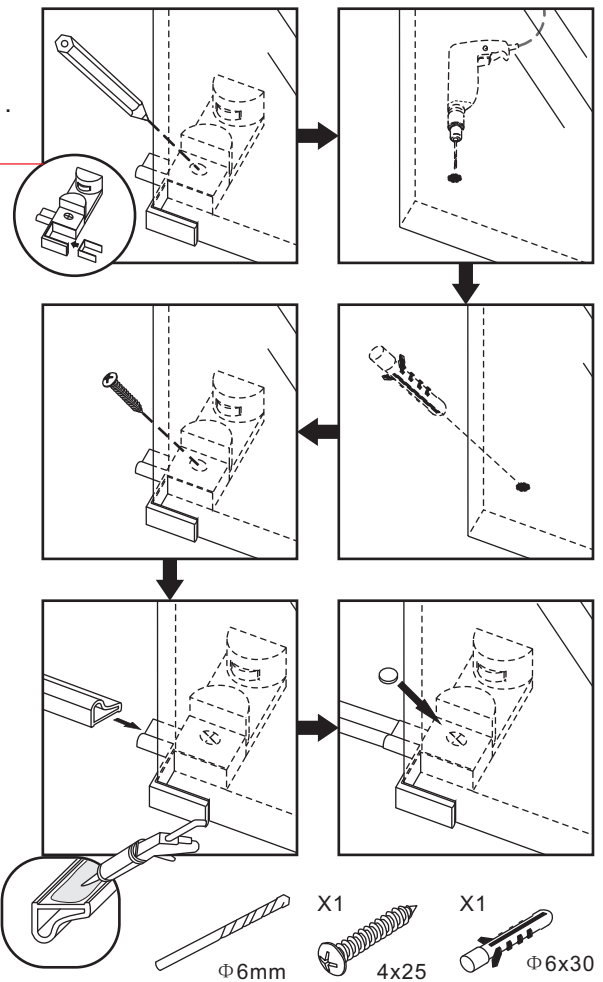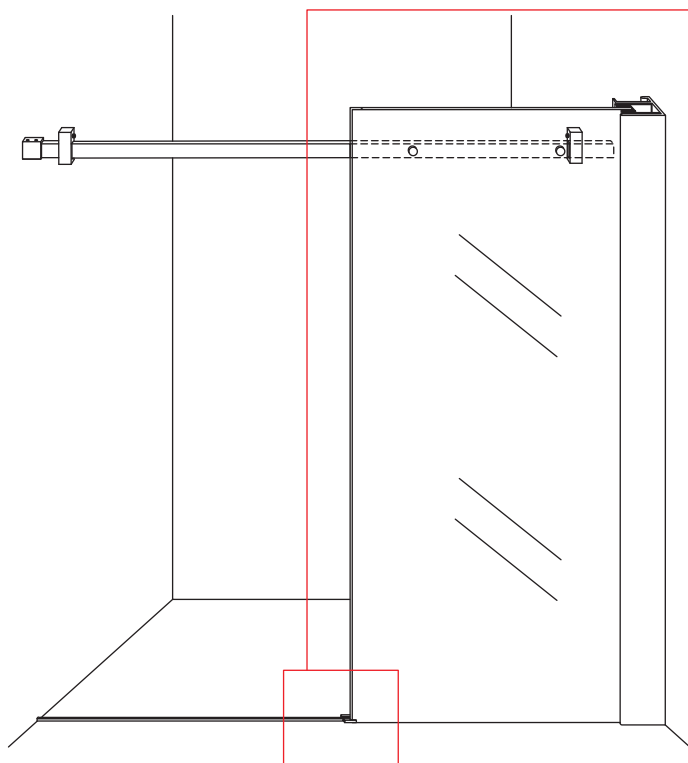1. Install the groove and fix in the glass side .
2. Make the glass gel on the waterproof strip then fixed .




5

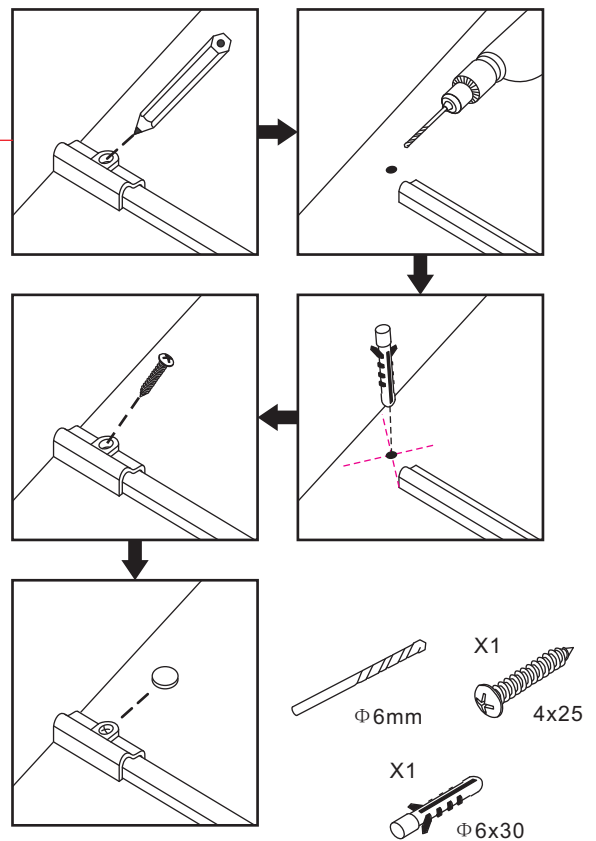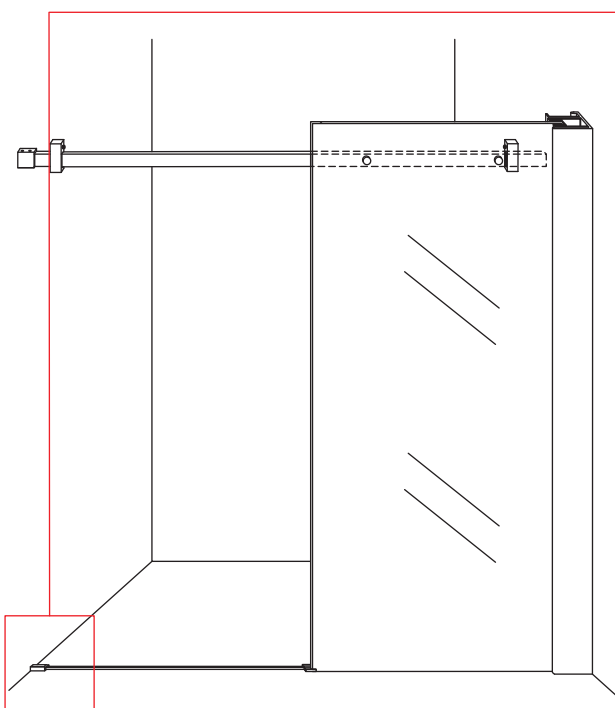Install the plastic decoration part .




6

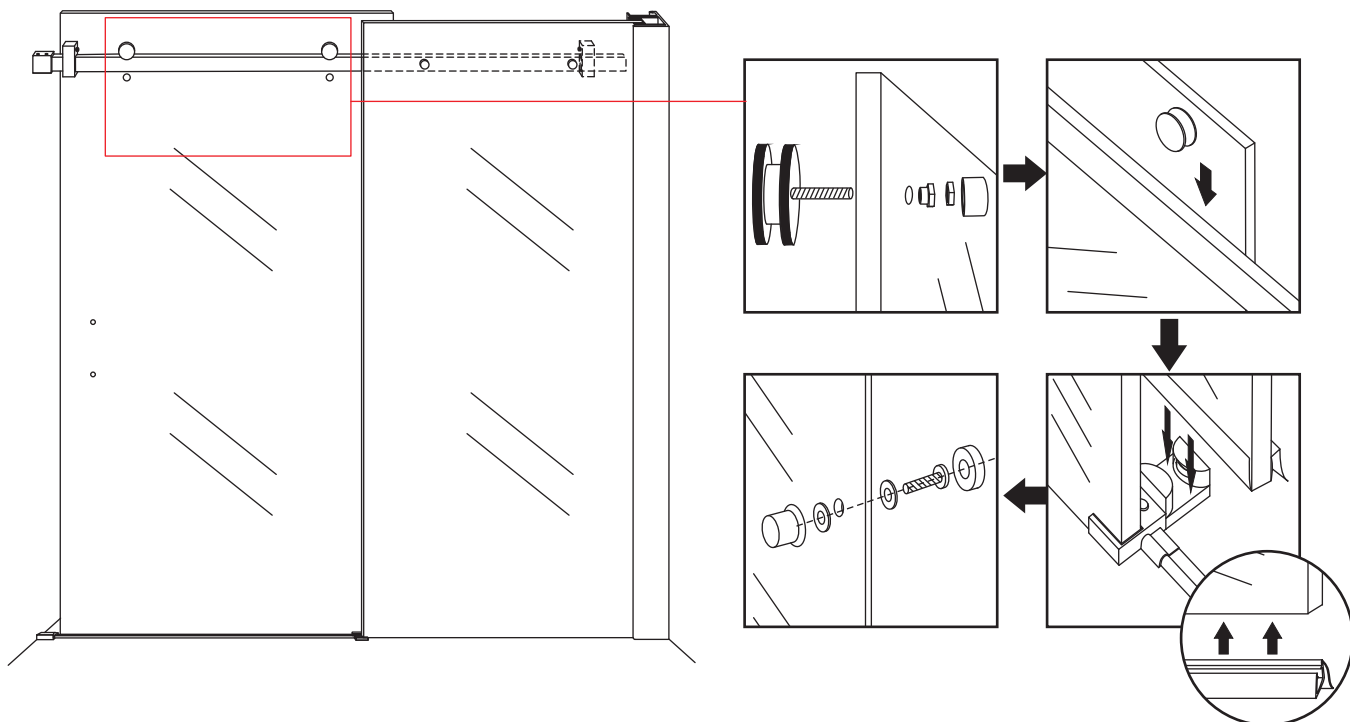1. Install the wheel on the glass .
2. Install the bottom waterproof
3. Hang the glass on the sliding track ,make sure the glass on the groove.
4. Install the fix part .




7

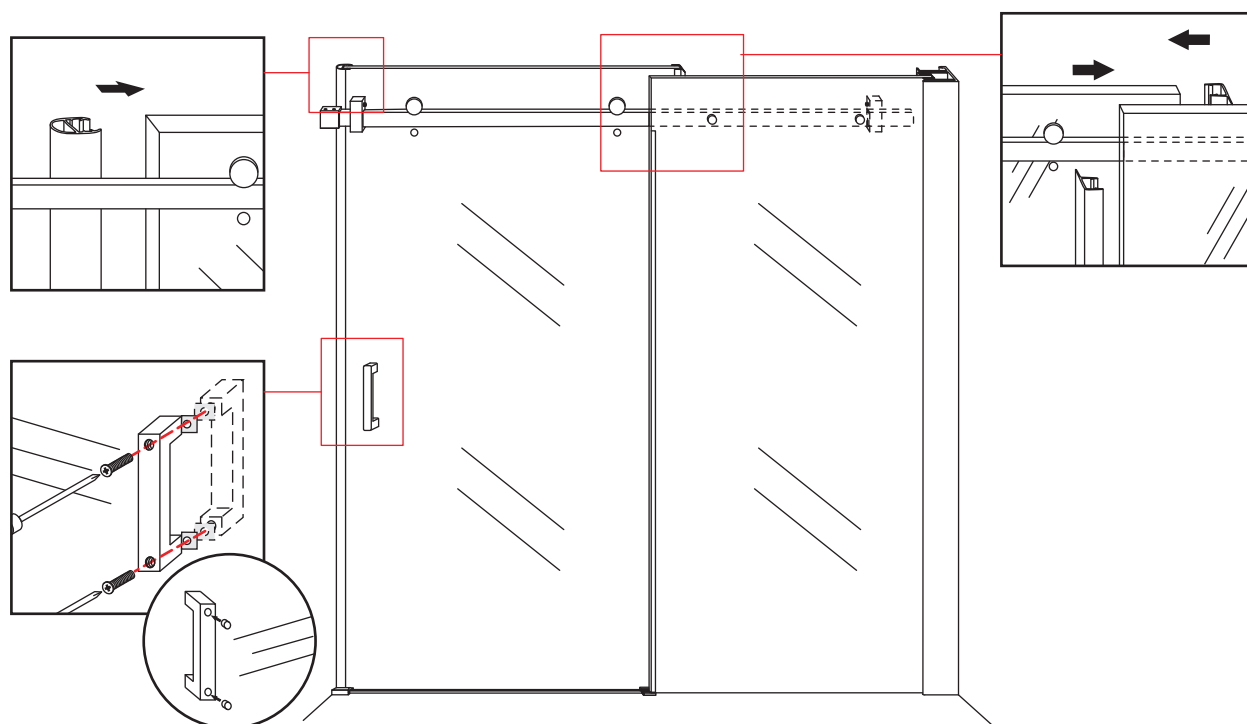1. Install the waterproof.
2. Install the U shape waterproof Gasket.



8

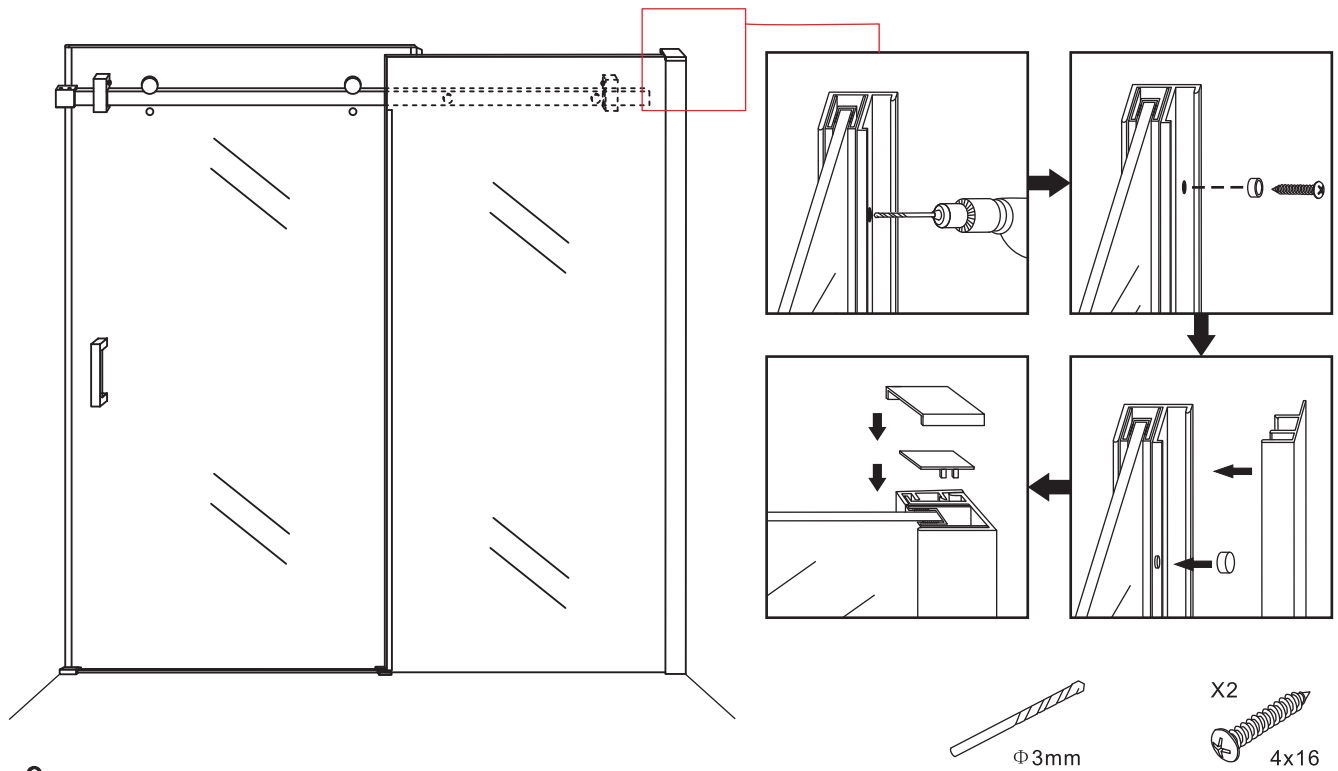1. Install the profile cap .
2. Install the top decoration part .



Make the glass gel then make sure without shower in 24hours .

